1、附件文件名：赤兔中英说明书包材 说明书
2、材质:80g书纸
3、工艺:单色印刷
4、成品尺寸:单页宽高: 100*142mm

MOBAPAD

魔派赤兔HD机械手柄

APP下载

通过扫描这个二维码
App可下载

售后服务

◇ 注意事项：
1.若商品有质量问题,请首先联系我们的客服进行登记。
联系方式:service1@mopaigame.com

广州市心享文化有限公司
地址：广州市天河区黄埔大道中336号第六层C02
2、如需退、换商品,请确保商品完好无损(包括商品外包装、附赠品、说明书、售后卡、标签等),不影响二次销售。
3.如要保修商品,请务必完整填写用户姓名、联系电话、联系地址,正确填选售后要求与详细说明售后原因,将售后卡随货寄回。

连击功能

◇ 可设置连击功能的按键:A/B/X/Y/L1/L2/R1/R2
◇ 手动连发状态:手柄LOGO灯按键触发闪烁
◇ 自动连发状态:手柄LOGO灯自动持续闪烁

手动连发	Ⓐ +功能按键	第一次设置后，该功能按键，按键连发，松开停止
自动连发	Ⓐ +功能按键	第二次设置后，该功能按键，按下后，自动连发，再次按下该功能按键，暂停连发。
取消单键连发	Ⓐ +功能按键	第三次设置后，取消该按键连发功能。
取消所有连发	长按三秒Ⓐ	取消所有功能按键设置的连发功能。

连击档位:高档 中档 低档

档位切换	Ⓐ + ⊕ 或 ⊖	Ⓐ + ⊕ 降档 Ⓐ + ⊖ 升档
档位灯光提示		调到低档时当前模式灯闪3下 调到中档时当前模式灯闪2下 调到高档时当前模式灯闪3下

宏编程

◇ 可设置宏编程功能的按键:A/B/X/Y/L1/L2/L3/R1/R2/R3/加号键/减号键十字键以及摇杆(摇杆只支持八个方向，不支持模拟量)

手动触发	按住「Ⓐ」3秒，LOGO灯变成紫色常亮，此时录制操作的按键，录制完毕后，按下最后的M1/M2按键结束录制（用户按下M1键结束，宏记录的操作就会存储在M1键上，按下M2，则存储到M2）LOGO灯恢复； 按下已编辑宏功能的M1/M2按键触发录制操作。	
取消单个宏编程按键	按下「Ⓐ」3秒，手柄LOGO灯会变成紫色常亮，按下需要的M1/M2需要取消的按键（按下取消单个宏定义/用户自定义按键操作将删除）	
删除M1/M2宏编程按键	双击「Ⓐ」两次，手柄短震提醒，此时屏幕提示按键功能（屏幕不会跟随用户所记录的按键操作），再次双击「Ⓐ」两次手柄长震提醒,此时恢复两个自定义按键的功能。	

◇ 注意事项：
M1/M2出厂默认为B/A，宏设置后将变为宏功能，如需改为单新按键请前往APP修改。

产品布局

支持平台：SWITCH主机



A 左摇杆	B 右摇杆	C 方向键	D ABXY键
E 减号键	F 加号键	G 截屏键	H HOME键
I 模式指示灯组	J 连击键	K 宏编程键	L NFC/LOGO灯

M R 键	N L 键	O ZR 键	P ZL 键
Q M1自定义键	R M2自定义键	S 配对键	T 复位孔
U Type-c充电口			

宏自动循环

◇ 开启宏循环:
按住手柄正面「Ⓐ」+背后「M1」按键,则开启M1按键的宏循环功能。

◇ 关闭宏循环:
在宏循环的过程中,按住手柄正面「Ⓐ」+背后「M1」按键,则关闭M1按键的宏循环功能。

(开启M1宏循环/关闭M1宏循环)

◇ 注意事项:
仅M1/M2可开启宏自动循环。
宏循环不会被按键操作所中断,只有手动关闭,宏循环才会结束。

NFC功能

◇ 手柄内置NFC，支持感应amiibo配件
◇ 使用方法:
当Switch主机与蓝牙连接成功后，如游戏支持Amiibo功能，可使用Amiibo手办，在手柄LOGO处激活游戏中对应道具

连接SWITCH主机

◇ 点击Switch 主机界面下的「⚙」图标，点击“更改握法/顺序”
◇ 短按手柄「⊙」，手柄模式灯组跑马灯律动，进入配对模式
◇ 手柄模式灯组LED1常亮，此时「Ⓐ」返回主界面即可。

注：使用有线连接前，请确认手柄处于开机或休眠状态，并开启Pro手柄的有线连接。

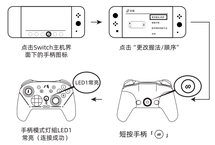

唤醒SWITCH主机&回连

◇ 自动休眠或手动关机后，短按「Ⓐ」，将唤醒或回连上一个连接成功的设备。

开关机指示

◇ 长按「Ⓐ」3秒关机;

◇ 手柄在已联接状态,若闲置超过15分钟,自动关机;

◇ 手柄在无联接状态（等待联接），若2分钟后无联接自动关机;

灯光调节



切换RGB灯效	Ⓐ + ⊖	灯颜色1:单色白（默认); 灯颜色2:单色蓝; 灯颜色3:单色红; 灯颜色4:单色绿; 灯颜色5:单色黄; 灯颜色6:单色青; 灯颜色7:单色紫;
切换RGB颜色	Ⓐ + ⊕	灯效1:常亮（默认); 灯效2:呼吸; 灯效3:关闭;

电量指示

◇ 当手柄电量过低时,手柄低电量报警中间模式通道灯快速闪烁。

◇ 关机状态下给手柄充电，手柄通道指示灯(闪烁)LOGO灯（常亮），电量充满后10秒，灯光自动熄灭。

◇ 为工作状态下的手柄充电,手柄当前通道指示灯闪烁两次提醒，随后恢复默认灯效。

MOBAPAD

MOBAPAD
CHITU HD MECHANICAL CONTROLLER

DOWNLOAD THE APP

App can be downloaded
by scanning thisOR codeand

AFTER-SALE SERVICE

Feel free to reach out to us if you encounter any concerns or issues with Mobapad controller. We are committed to addressing your needs and ensuring your satisfaction within a year.

service2@mopaigame.com

TURBO FUNCTION

◇ Turbo-Mappable Buttons: A/B/X/Y/L1/L2/R1/R2.
◇ Manual Turbo: The LOGO light flashes when the turbo is triggered.
◇ Auto Turbo: The LOGO light continuously flashes automatically.

Manual Turbo	Ⓐ+Function Button	After the first setup, hold down the function button to activate turbo; release to stop.
Auto Turbo	Ⓐ+Function Button	After the second setup, short press the function button to activate automatic turbo; short press the function button again to pause the turbo.
Disable Single-Key Turbo	Ⓐ+Function Button	After the third setup, the turbo function of the certain button will be disabled.
Disable All Turbo	Long press Ⓐ for 3s	Disable turbo for ALL function buttons.

Turbo Modes: High, Medium, Low

Switch Modes	Ⓐ + ⊖ or ⊕	left / right	Ⓐ + ⊖ downshift Ⓐ + ⊕ upshift
Mode Indicators			For low gear, the current mode light blinks once. For medium gear, the current mode light blinks twice. For high gear, the current mode light blinks 3 times.

MACRO (LOCAL SETUP)

◇ Assignable Buttons: A/B/X/Y/L1/L2/L3/R1/R2/R3/Plus/Minus/D-pad and joysticks
(joysticks only support eight directions, no analog input).

Macroprogramming	Press and hold the Ⓐ for 3s, the LOGO light will turn solid purple. Then start recording. At the end of the recording, press M1 to save recorded macros on the M1 button, or M2 to save macros on the M2 button. Press the M1/M2 key to trigger the recorded operation.
Clear the macros recorded on the M1 or M2 button	Long press the Ⓐ for 3s, the LOGO light will turn solid purple, then press M1 or M2 to clear the recorded macro
Shield the macros recorded on M1/M2	Double-press the Ⓐ to trigger a short vibration, meaning the macros for M1/M2 are blocked (not cleared). Double-press the Ⓐ again to trigger two long vibrations, meaning the macros for M1/M2 are restored.

◇ Important Notes:
The default factory functions for M1/M2 are face buttons B/A. After setting them as macros, if you wish to remap them, please go to the APP.

LAYOUT

Exclusively Designed for Nintendo Switch



A Left Stick	B Right Stick	C D-Pad	D Face Button
E Minus Button	F Plus Button	G Screenshot	H Home Button
I Channel Lights	J Turbo Button	K Macro Button	L NFC / LOGO Light

M R Key	N L Key	O ZR Key	P ZL Key
Q M1 customizable	R M2 customizable	S Pairing Button	
T Reset Hole	U Type-C Charging Port		

MACRO AUTO-LOOP

◇ Activate Macro Loop: (take M1 as an example)
Hold Ⓐ + M1 to enable the macro loop for the M1 key.

◇Deactivate Macro Loop:
During the macro loop, hold Ⓐ + M1 to disable the macro loop function for the M1 key.

(Enable M1 macro loop/ Disable M1 macro loop)



◇ Note：
Only M1/M2 can enable macro auto loop.
The macro loop will not be interrupted by other button presses and can only be ended by pressing certain button combinations.

NFC SENSE

How To Use:
After successfully connecting the controller to the Switch console, if the game supports Amiibo functionality, you can use the figurine on the M-shaped logo sensing area to activate in-game items.

CONNECT TO THE SWITCH

◇ On the Switch, click on ⚙ and select "Change Grip/Order".
◇ Short press Ⓐ , the channel lights flash like marquee, pairing starts.
◇ When LED1 stays on, pairing is complete. Press Ⓐ to return home page.

Note: To use a wired connection, ensure the controller is on or in sleep mode and enable wired mode for the Pro controller

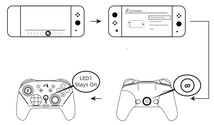

Connection Done　　Short Press this button

WAKE UP & RECONNECT

◇ After automatic sleep or manual shutdown, short pressing the Ⓐ will awaken the controller or reconnect to the previously paired device

ON & OFF

◇ Long pressⒶ for 3 seconds to power off.
◇When the controller is connected, it will automatically power off if idle for more than 15 minutes.
◇When the controller is in an unconnected state (waiting for connection), it will automatically power off if not connected after 2 minutes.

LIGHT ADJUSTMENT





Change RGB Light Colors	Ⓐ + ⊖	Color 1: White (Default) Color 2: Blue Color 3: Red Color 4: Green Color 5: Yellow Color 6: Cyan Color 7: Purple
Change RGB Light Effect	Ⓐ + ⊕	Light Effect 1: Stay on (Default) Light Effect 2: Breathing Light Effect 3: Off

BATTERY INDICATOR

◇ Low battery warning: The middle mode channel light flashes rapidly.

◇ When charging the controller in the power-off state, the channel lights blink, and the LOGO light stays on. After the battery is fully charged, the lights will automatically turn off after 10 seconds.

◇ While playing games, if you charge the controller, the working channel light will flash twice as a reminder, and then return to the default lighting effect.